



# Smart Home Security

CHS5700WF, CHS5500WF, CHS5200WF

## INSTALLATION GUIDE

### Important notice

Read before installing.

Do not remove the red battery tabs until instructed to within the app.

## 1. Download the Honeywell Home App from the App Store or Google Play

Help the Homeowner download and install the Honeywell Home app on their Smartphone or Tablet. Then ask permission to setup the system using their device or assist them in setting it up themselves. The app will guide you step-by-step through the install. Download and open the app. The app will guide you step-by-step through the install.

## 2. Use App to Setup Camera Base Station

Place your **Camera Base Station** where it gets the widest view of your home.

## 3. Use App to Set up Sensors

The app will have detailed step-by-step instructions to make sure the sensor is installed and functioning correctly.



 
### Install Tip

Create your app account or login to an existing account before plugging in your Camera Base Station.




# Lights and Sounds

Here are some ways your Camera Base Station uses light and sound to draw your attention and keep you aware of system status.



# Base Station

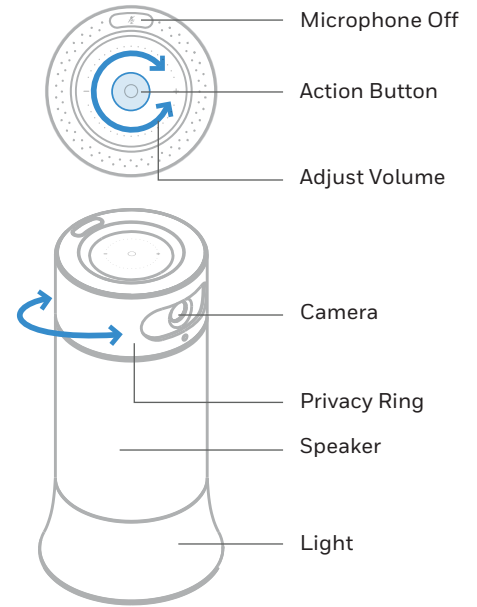

## Mode

## Looks like



### Home

In this mode, you will hear a chime when doors and windows open. Motion sensors are disabled.

**White** single pulse of light fading to off to let you know your sensors are disabled



### Away

In this mode, opening a window or motion will trigger an alarm, opening a door will start the entry countdown.

**Green** steady glow to let you know all sensors are active



### Night

In this mode, opening a window will trigger an alarm, opening a door will start the entry countdown. Motion sensors are disabled.

**Purple** steady glow to let you know door and window sensors are active

## Event

## Sounds like

## Looks like



### Microphone Off

This button temporarily disables the microphone. When away, microphone will reactivate.

**Single tone**

**Red** steady glow



### Entry Countdown

Use this time to cancel the siren when in night or away.

**Accelerating tone** followed by siren if not disarmed

**White** pulsing light during countdown



### Departure Countdown

Use this time to leave the home after away mode is set.

**Recurring tone** every second

**Green** pulsing light during countdown



### Notice

Keeps you aware of any minor issues. Tap action button for additional information.

**Silent** until you tap the action button

**Amber** flutter



### Urgent Notice

Keeps you aware of any critical issues. Tap action button for additional information.

**Silent** until you tap the action button

**Red** flutter



**resideo**

[www.resideo.com](http://www.resideo.com)

Resideo Inc., 1985 Douglas Drive North  
Golden Valley, MN 55422

Input: 12 V = 2.5 A

The operation of this equipment is subject to the following two conditions: (1) this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.